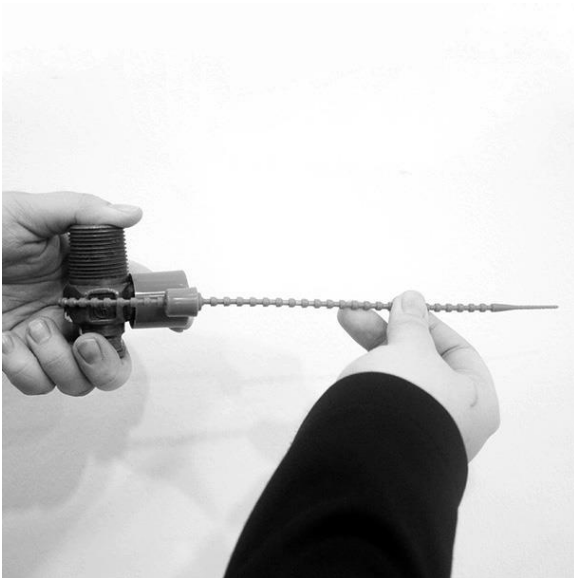


# **FREON SEAL LOCKING PROCEDURE**



**Diagram A**



**Diagram B**

## **STEP 1**

Hold the seal cap using one hand over the valve and with the other, insert the strap into the entry hole, as shown in Diagram A.

## **STEP 2**

After inserting, pull the strap tight until the maximum and ensure there is no gap left after sealing.